



Dear User,

The ceiling mount should only be installed by a technical expert (electrical engineer, technician) or a comparably qualified person.

Ships in 3 boxes:



• Box 1: Ceiling Mount Swing/Extension Arms



Box 1 Contents



Operating Manual



Installation Instructions




Hardware Kit



Box 2: Spacer Tube Box




Contents of Box 2:

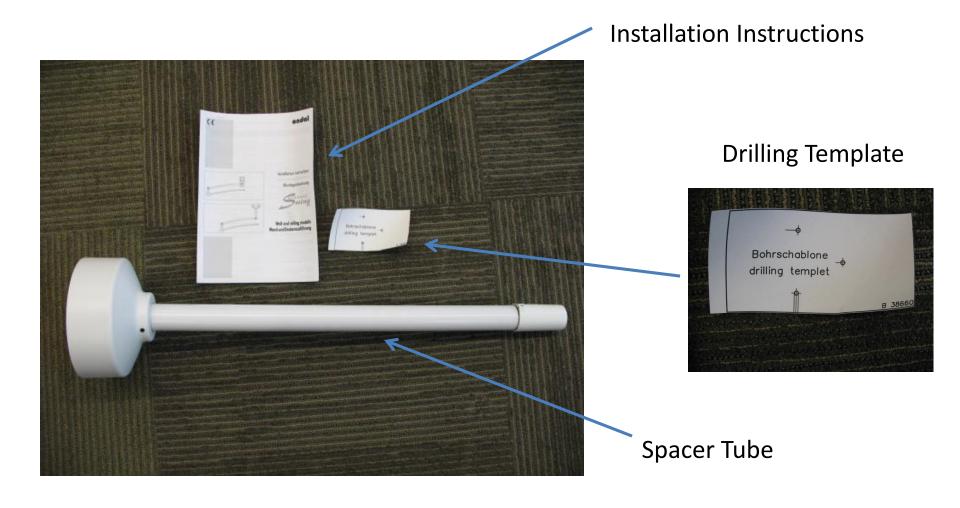

 Please note parts located in the plastic sleeve of the spacer tube as indicated below



View from top

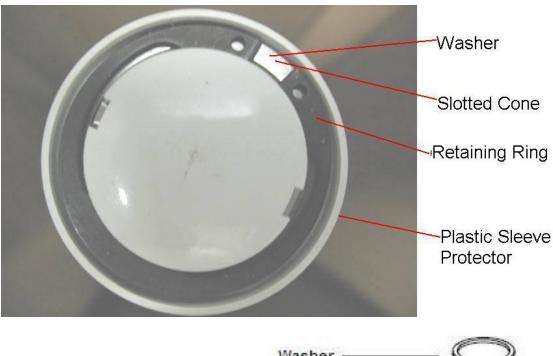

Slotted Cone

Retaining Ring

Box 3



Luminaire



Mounting Spacer Tube

Note: Spacer Tube is designed to accommodate ceilings between 8-10ft. Tubing is shipped to accommodate a10 ft ceiling and can be shortened to accommodate an 8ft. ceiling. **If at all possible**, secure mounting plate 10 ft off the floor (even if this requires mounting the plate above a false ceiling).

If shortening is required follow instructions on next 4 pages.

Shortening Spacer Tube

 Remove wires from terminal block on the mounting plate



Remove pin/steel bearing sleeve and wires running inside spacer tube




- Trim spacer tube to accommodate actual ceiling height.
- Drill and tap 3 holes (5mm diameter and M6 thread)
 - Use drill template provided with Ondal Installation Instructions (or dimensions on next page)

Place drill template at the edge of the tube




Drilling Template (dimensions in millimeters)

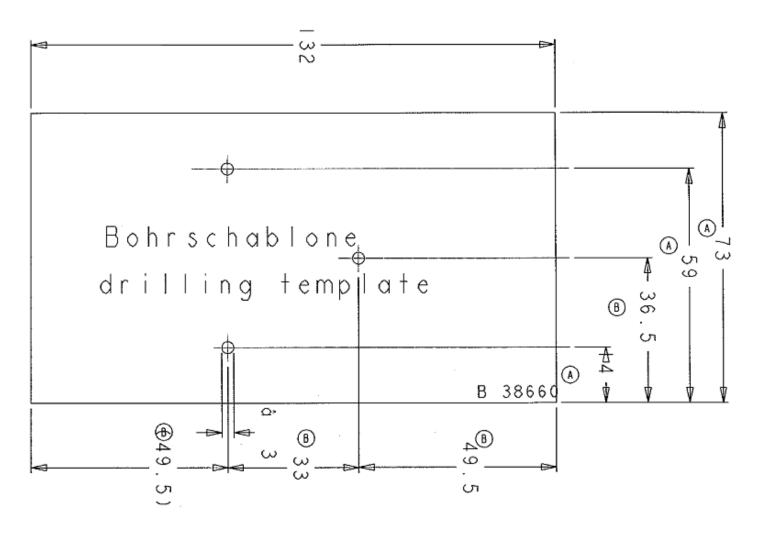

Reinstall wire through tubing and into terminal block


Ground wire to mounting plate

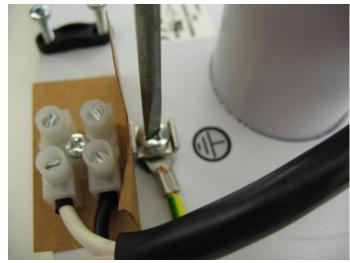

Insert other two set screws and tighten



Insert set screw with additional length ensuring screw engages the hole in the pin/steel bearing sleeve

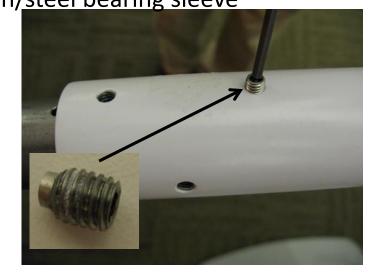


Mounting Plate


Mounting Spacer Tube

Loosen three threaded pins/set screws(1) and remove fixture flange/bezel(2)

- Using the drilling template (or with dimensions on next page) fasten spacer tube mounting plate to the ceiling
- The indicated transformer is not part of the GS900 system and is not supplied with the assembly (see wiring instructions on page 17)

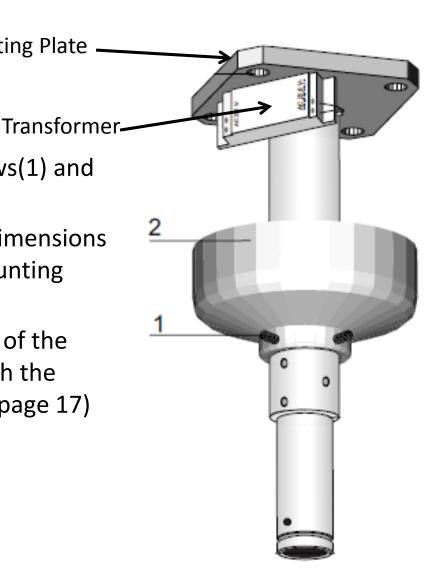

Drilling Template Dimensions

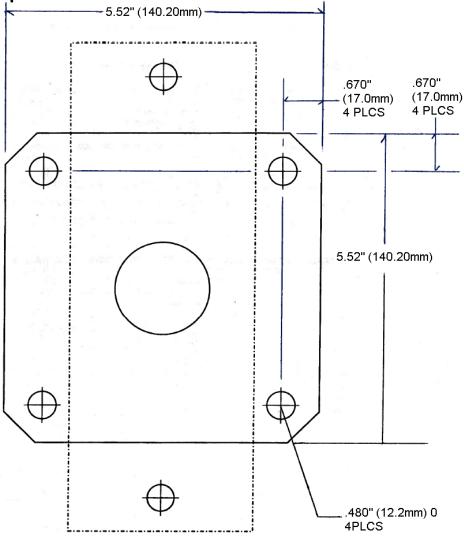

ONDAL industrietechnik GmbH Wellastr. 2-4

36085 Hünfeld / Germany

Wiring Instructions

Connecting power wires



Domestic (see above image)

Black -- Hot

White -- Neutral

Green – Green/yellow -- Ground

International

Brown -- Hot

Orange -- Neutral

Green - Yellow -- Ground


Connecting Spring Arm to Extension Arm





Remove and discard protective cover

Remove plastic cap/electrical connector from one end of the extension arm

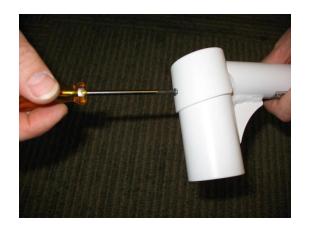





Slide spring arm bearing into extension arm





Place washer



Install Spring Clip using tool




Replace plastic cap/electrical connector and secure with screw





Mounting Extension Arm to Spacer Tube

Remove plastic cap/electrical connector from other end of extension arm

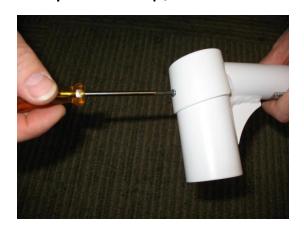



Slide Extension Arm onto Spacer Tube Bearing



 
Place washer



Place slotted cone inserting cone feature into hole in bearing



Install spring clip using tool





Replace plastic cap/electrical connector and secure with screw





Please note: The spring tension of the spring arm is preset by the manufacturer (Ondal). The luminaire must be attached for the spring arm to balance.

Attaching Luminaire to Spring Arm









Remove and discard protective cover

Loosen the slotted screw

Rotate plastic collar 180° to reveal key slot





Loosen (do not remove) the Phillips head screw



Insert luminaire into the spring arm









Place securing segment completely into slot



 Tighten Phillips head screw, turn plastic sleeve 180° and tighten slotted screw









• Turn on light to ensure it is working properly



